

# Art nr.: S22-210BOXD E-nr:

DALI


<b>G</b> <sup>20</sup> KV	PF> 0.95	IP66
------------------------------	----------	------

Model No.	S22-BOX1000D		
Input Voltage	AC100-240V 50/60Hz		
Output Voltage	DC320-340V		
Built-in driver	4 pcs		
Extra 20KV SPD	$\checkmark$		
G2.0 driver control board	$\checkmark$		
Dimmable	Dali-2		
AC /DC cable (optional)	3-core 1.5/2.5mm <sup>2</sup>		
Dimension	540 x 275 x 69 mm		
Net weight	7.2 Kg		

#### Wiring of separated control gear solution




### (2) Connection of control gear (Dali)

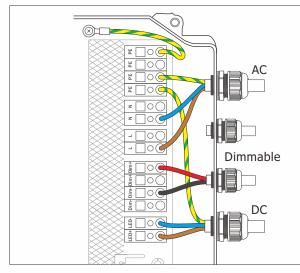



## Dimensions (Unit: mm)

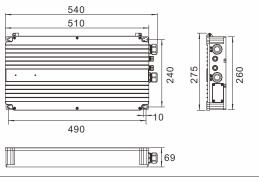

(1) Connection of luminaire




LED+ LED-Ν Ν PE PE ΡE 0 0 С 0 0 Ο 0 С C С  $\bigcirc$  $\bigcirc$ С Label Description LED+ LED+ Connection LED-LED-Connection **Dim-** Connection Dim-Stripping Length Dim+ Dim+ Connection Live 1 Ν Null 8-9mm PE Protection Earth



**Note:** According to the actual needs, the number of connectors will increase or decrease. Different dimming function cannot be used at the same time.

### (3) Cable gland of Matrix



Connection	Cable Gland	Toque (N*m)	Cable Diameter (mm)	Cable Section (mm <sup>2</sup> )
AC Input	M20	5.5	8-10/10-12	1.5/2.5
DC Output	M20	5.5	8-10/10-12	1.5/2.5
Dimmable	M16	2.5	7-10	1.0-1.5

V 1.0 Dec, 2023

01



#### Installation ways




Control Gear on the lamp



Control Gear fixed on the pole



Control Gear put in the electric cabinet

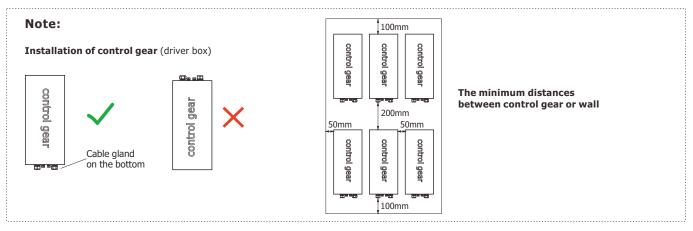

# Caution:

- 1. Waterproof connectors and installation tools are not included. Installation and maintenance must be performed by qualified person.
- 2. screws were tighten up.
- 3. Ground wire must be well connected.
- 4. Please make sure the control gear is working with correct input voltage.
- 5. Do not use chemicals or corrosive cleaner to clean this.
- 6. The minimum clearance distance from the top and sides of the control gear to normally flammable building elements is 10 cm.
- 7. WARNING: FELV terminals marked "Risk of electric shock" are not safe to touch.



WARNING: Circuits connected to any FELV control terminal shall be insulated for the LV supply voltage of the control gear and any terminals connected to the FELV circuit shall be protected against accidental contact.

Danger: electricity

#### Utilization of used lamps

Control gear must be disposed of in accordance with current regulations concerning environmental protection. Proper utilization of equipment enables preserving valuable environmental resources and avoiding adverse impacts on health and the environment, which may be threatened by inappropriate waste handling.



10CM Min

10CM Min

ha